



JL/JT Ultimate Control Arms Instructions

1. Anti-seize is already applied and arms are sent at collapsed lengths (see lengths for locations).
2. To adjust use the center section to rotate and get length (NEVER) turn one joint at a time.

Suggested lengths:

	Collapsed	2.5" Lift	3.5" Lift	4.5" Lift
Front Upper	20.5"	20.5"	20 9/16"	20 5/8"
Front Lower	23.5"	24 1/4"	24 5/8"	24 11/16"
Rear Upper	17"	17 9/16"	17 5/8"	17 11/16"
Rear Lower	19 3/8"	20 1/4"	20 5/16"	20 3/8"

Warranty:

Center aluminum section is lifetime warrantied for failure, including bending, cracking, or breaking. Should any of these failures occur please send the center section to RPMSTEERING for replacement. (Shipping and handling additional).

Disclaimer:

Customer assumes full responsibility for use, installation and routine maintenance. RPM Steering is not responsible for damage as a result of improper installation, use or maintenance.

Front Upper Orientation with Clasps:

